


Mounting Instructions For #5353 Tri-Fold Mirror

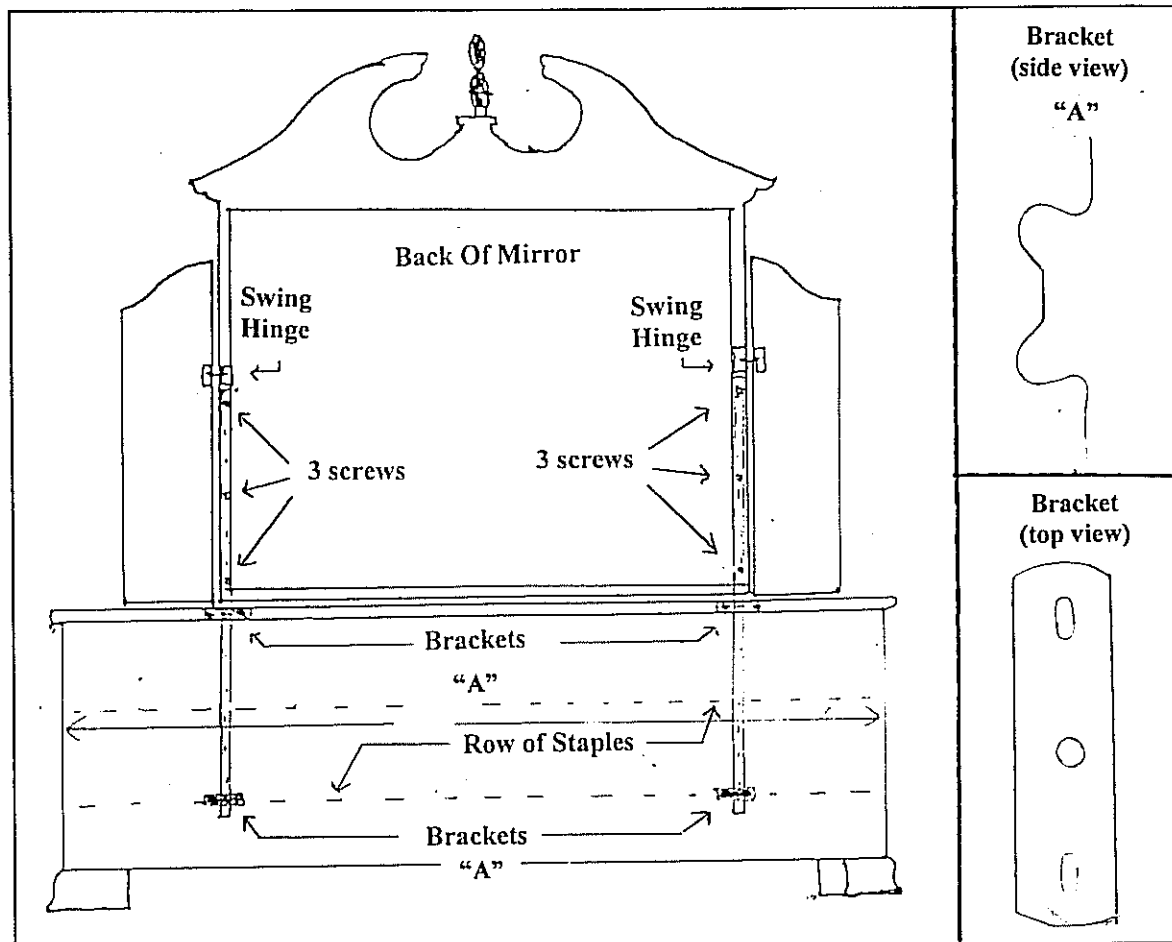

1. Place mirror face down on carpet or a blanket.
2. Place metal mirror supports on back of mirror directly below the swing hinge at the outside edge of center mirror section.
3. Fasten with three (3) screws on each side (top, middle, bottom). Pre-drilling for these screws is recommended. Be careful you do not drill through the mirror from back to front when pre-drilling.
4. After mounting the metal supports, place and center the mirror on dresser.
5. Slide the four (4) supplied metal brackets "A" onto the mirror supports, and attach with two (2) screws on each bracket. The upper metal brackets should be positioned directly below the lower edge of the dresser top. The lower metal brackets should be positioned at the lowest point where a row of staples run left to right across the back of the dresser.
6. Place four (4) large screws in the center hole on each of the metal brackets and tighten securely.
7. Inspect to insure the mirror is securely and safely fastened to the dresser.